

## 1 Download CSee App

Mode 1. Scan the QR code

Tips: please make sure that the WIFI network is available.

Mode 2. Download the CSee App in App store or Google Store on Mobile.



Csee APP

PC client download URL

<http://pan.baidu.com/s/1nvSDMeI>

PC client download the player to play the recording file URL

<http://pan.baidu.com/s/1bQIenK>

## 2 Connect the power


connect the power supply, once the prompt "quick configuring" is heard, the camera is power on.

Tips: please notes that there is voice guidance during the installation


## 3 Add device

1 Open CSee, register and login (Temporary login alternatively, registration-free.)

2 Follow the App guidance to add device

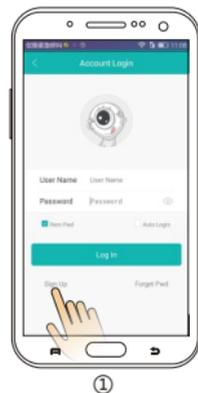

1

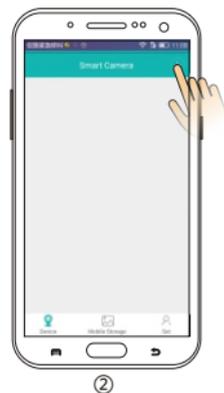

2



3



4

Please input the wifi password

## 4 Device list

Share to families and friends

Motion alert


Camera list

Camera parameters


Alarm Information

App setting

Local recording videos and pictures

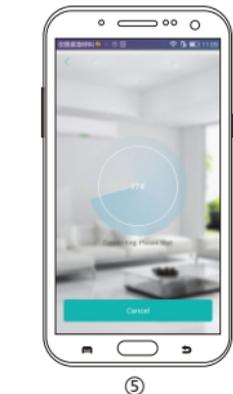

5

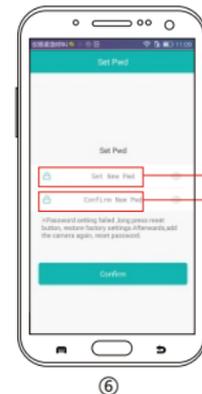

6

Set password for the Device

Confirm the password

## 4 Check real-time video

Entering real-time video pages,the user can see the real-time video, control the voice, voice intercom, capture picture and record video, etc.

Screen display option

Definition option

Sound monitor

Video playback /Album



slide the picture

Record cut

Full-Screen Preview

Voice intercom

Picture capture

## FAQ

Q : How to store the recording video?

A: The camera comes with external TF card slot(class 10) , the users are suggested to insert 4 to 64G TF card. otherwise, the important functions such as recording storage, checking previous video, pictures are not available.

Q: What to do when the camera gets offline abnormally?

A: Check the power and the network  
Cut the power and restart the camera  
Reset the camera

Q: How to switch the network?

A: Please reset the camera before it is connected with new network. Press reset button with a pin for 6 seconds, release after hear the voice guidance " Restoring to the factory setting, please do not cut the power" . Then the camera defaulted successfully. Restart the camera and then connect with network.

## Explanation

The App and firmware will be upgraded at irregular intervals, please upgrade online.

## Product warranty card

Model name		Model number	
date of purchase		dealer	
fault cause			
fault process status			
Customer name		gender	
Tel		Zip code	
Add			

Warranty: 1 year